

PLEASE NOTE THAT THERE ARE 2 VERSIONS OF THE DESICCANT DRYER.
Both versions work equally as well with any model of washer that you may have.



With Montmorillonite Clay Desiccant (gray granules) and without the Montmorillonite Clay Desiccant granules.

How to Bake Desiccant Dryer Beads




Remove the Desiccant Dryer Cap. Remove the spacer from the top of the Montmorillonite Clay Desiccant (gray granules) and set aside.



Pour the Montmorillonite Clay Desiccant (gray granules) into a container and set aside.



Turn the Desiccant Dryer upside down onto a container (you can use whatever you have) and tap firmly until the Silica Gel Desiccant Beads come out. Remove the spacer and set aside.

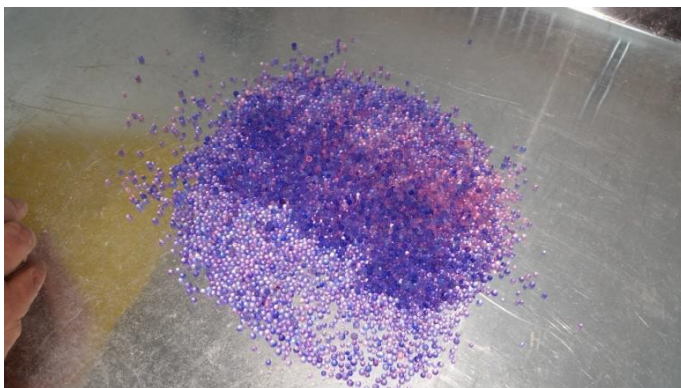

Pour the Silica Gel Desiccant Beads onto a pan such as a cookie sheet. Preheat your oven to 350 degrees. Bake the Silica Gel Desiccant Beads for 45 minutes. Let cool.

Follow the steps below to return the Silica Gel Desiccant Beads and Montmorillonite Clay Desiccant (gray granules) to the Desiccant Dryer correctly.

Please note that the pictures are showing multiple dryers being filled.



Place the smaller spacer in the bottom of each container. Position the spacer as shown in the picture above (indicated by the red arrow).



Using a funnel pour the Silica Gel Desiccant Beads back into the desiccant dryer.



Place one of the larger spacers on top of the Silica Gel Desiccant beads. Using tamping tool, pack the desiccant beads. Note: use whatever you have on hand.



Fill the remaining space in the container with Montmorillonite Clay Desiccant (gray granules).



Place the remaining larger spacer on top of the Montmorillonite Clay Desiccant (gray granules). Place the cap onto the container and tighten.

Return the Desiccant Dryer to your unit.

Desiccant Dryers Without Montmorillonite Clay Desiccant Granules



Place the smaller spacer in the bottom of each container. Position the spacer as shown in the picture above (indicated by the red arrow). Using a funnel pour the Silica Gel Desiccant Beads back into the desiccant dryer.



Place the larger spacer on top of Silica Gel Desiccant Beads. Place the cap onto the container and tighten.
Return the Desiccant Dryer to your unit.